
Date: 12th. May, 2020

2D Lidar UGM-50LAP (UUGM002) **Specification** CE **RoHS** Amended Pages Symbol Corrector Date Amended reason No. Checked by Drawn by Designed by Approved by Title UGM-50LAP Specification M.Hino N. N. T.Kamon Drawing C-42-04425 1/14 Sakamoto Sakamoto No.



General

- The UGM-50LAP scans a semicircular field using a laser beam (λ = 905 nm), then calculates coordinates by measuring the distance to an object and its corresponding step angle and detects obstacles within the setting area.
- This product can output distance data using the communication protocol SCIP.
- This product is Class 1 laser product.
- You can set a scan speed / angular resolution from three modes.
- You can reduce the influence of interference between multiple units of this product using the synchronized rotation of the motor inside products. This function synchronizes the motor rotation to an external reference signal.
- You can configure "detached area setting" at the area away from the UGM-50LAP.
- The UGM-50LAP has a function of the dirt detection (contamination detection) on the optical window. This product can output a control signal when detecting dirt on the optical window.
- Configuration (Laser scanning image) In normal mode

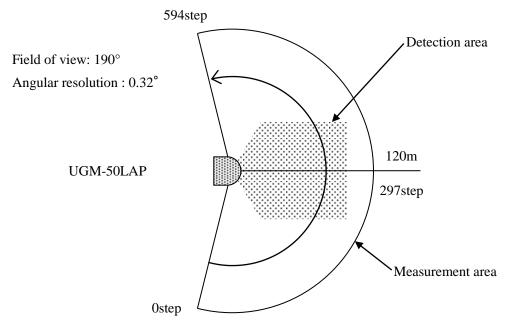

The specifications in normal mode, low speed mode, and high resolution mode are as follows.

Angula	ar resolution/	Angular resolution	Field of view	Step	Front ste	ep
Scan sp	peed					
Norma	l mode	a a a 9	1008			
20ms /.	3000rpm	0.32°	190°	0 to 594step	297step)
Low sp	beed mode	0.1.09	1008	0		
40ms /	1500rpm	0.16°	190°	0 to 1188step	594step)
High re	esolution mode	0.00	1000	0.0076.0	1100	
80ms / 750rpm		0.08°	190°	0 to 2376step	1188step	
Title	UGM-50LAP	Specification	Drawing. No.	C-42-04425		2/1

- 2. Disclaimer
 - The UGM-50LAP (hereafter referred as sensor) is not certified for functional safety.
 - This sensor cannot be used for human body detection as per the machinery directives.
 - This sensor emits laser for measurement. Sensor's operation may become unstable under the influence of strong interference light or when emitted lights are not reflected back from object.
 - The sensor's operation may become unstable due to rain, snow and fog or due to dust pollution on the optical window.
 - Rules and regulations related to safety should be followed strictly when machine users and system designers operates the sensor.
 - When there is a risk that the this sensor is used for weapons of mass destruction, weapons and equipment aimed at killing human beings, and relevant technologies, etc., or when its usage for those purposes has become clear, sales may be prohibited in accordance with the Foreign Exchange and Foreign Trade Act, and the Export Trade Control Order (Japanese law). Moreover, regarding export of products, the formalities according to laws/Export Trade Control Order are implemented in order to maintain international peace and safety.
 - Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
 - Before using the sensor, please read carefully and understand this specification.

Produc	cation ct name	2D LiDAR					
Model	l	UGM-50LAP					
Light	source		Laser semi-conductor (905nm), FDA Laser Safety Class 1 (IEC60825-1:2014)				
Supply	y voltage	DC 24V±10%					
Supply	y current	Steady state current : 1A or less, Starting current : 1.5A or less, without Heater ^{*1}					
Power	consumption	24W or less (Steady state and current)					
Heater	r voltage	DC24V					
	r current	Steady state and Startin	ig current : 2	2A or less, Only Heater ^{*2}			
	r power mption	48W or less					
Detect object	tion range and	0.1m to 120m ³ Maximum area setting Minimum detectable si Normal mode	(10% Re: ^{*4} (90% Ref : 120m (D ze 65mm (5m	Tectance Black paper 500mm × 500mm) Tectance white Kent paper1400mm × 140 istance output range 160m) (), 130mm (10m), 260mm (30m) (), 65mm (10m), 130mm (30m)			
Avera; distanc	ge Accuracy by ce	10% Reflectance Black 0.1m to 30m : ±30 30m to 50m : ±40 0.1m to 50m : ±50 90% Reflectance white 0.1m to 50m : ±30 0.1m to 50m : ±50	z paper Omm (Ii Ommm (Ii Omm ^{*5} (C Kent paper Omm	ndoor 1,000lx or less) ndoor 1,000lx or less) Dutdoor 100,000lx or less)			
Measu resolut	rement tion	1mm					
10% Reflectance Black paper0.1m to 30m : $\sigma < 9mm$ (Indoor 1,000lx or 30m to 50m : $\sigma < 15mm$ (Indoor 1,000lx or 0.1m to 50m : $\sigma < 15mm^{*5}$ (Outdoor 100,000 90% Reflectance white Kent paper 0.1m to 50m : $\sigma < 9mm$ (Indoor 1,000lx or							
Scann	ing angle	190°					
Scan s		20ms ^{*6} (Normal mod 40ms ^{*6} (Low speed r	node 1500rp	11			
Start u	ıp time	Within 30 sec after pow	11 7				
Outpu	ts	7 PNP OUTPUT : Synchronization master output, Synchronization output Malfunction output, Contamination output, Area detection 1 to 3 (Open collector output DC30V 50mA MAX.)					
Output response time 40msec or less (Normal mode) 80msec or less (Low speed mode) 160msec or less (High resolution mode) In either case, change depending upon the delay setting			mode)				
Inputs		(All 15 patterns) (Photocoupler input, C	athode com	Reset input, Reboot input, Area input 1 to non, Input ON current 2mA)	94		
Interfa	nce	Ethernet 100BASE-TX		gotiation)			
LED d	lisplay	4 LEDs (Yellow gree	n, Orange,	Blue, Red)			
tle	UGM-50L	AP Specification	Drawing.	C-42-04425	4/		



Ambient temperature and humidity	-10 to +50°C below 85%RH -30 to +50°C below 85%RH (While using the heater) (Without dew, frost)			
Environment effect	A measured distance will be shorter than an actual distance under the influence o rain, snow and direct sunlight. ^{*7}			
Vibration resistance	10 to 150Hz 5G IEC60068-2-6:2007			
Shock resistance	3 times 50G, 1000 times 25G IEC60068-2-27:2008			
EMC standards	(EMI) EN61326-1:2013 EN55011:2009 + A1:2010 (EMS) EN61326-1:2013 EN61000-4-2:2009 EN61000-4-3:2006 + A1:2008 + A2:2010 EN61000-4-4:2012 EN61000-4-6:2009 EN61000-4-8:2010			
Protective structure	IP67 IEC60529:2001			
Insulation resistance	10ΜΩ			
Weight	Approx. 4.2kg (without connection cables)			
Material	Optical window : Polycarbonate, Body : Aluminum			
Dimensions(W×D×H)	155 mm \times 166mm \times 176mm (Without connector)			
	External dimension: MC40-03391			
*2 This is the c	ter power is not connected or OFF. current consumption of only heater. neater operation is described in "8. Heater Function".			
	ronment (under fluorescent lamps, 1,000 lx or less)			
44 T 1 1 1 1				


- *4 In the high resolution mode(750rpm), the guarantee detection range is 120m.
- *5 Detection cannot be guaranteed when direct light (such as sunlight) enters into the inside of the product.
- *6 You must restart the sensor after changing the scan speed.
- *7 Please check the influence of ambient environment on the detection accuracy using a product.

	1			
Title	UGM-50LAP Specification	Drawing. No.	C-42-04425	5/14
	\square			

4. Connection

4.1 Power supply connector


M12 4 core A-code socket (Female)

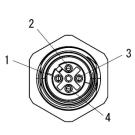

PIN No.	Function
1	Sensor power supply +V (24V±10%)
2	Sensor power supply GND -V (0V)
3	Heater power supply (24V±10%)
4	Heater power supply GND (0V)

4.2 Ethernet connector


M12 4 core D-code plug (Male)



PIN No.	Function
1	TX+
2	RX+
3	TX-
4	RX-

4.3 I/O connector

I/O1 : M12 8 core A-code socket (Female)

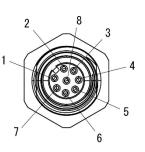

PIN No	Function	I/O
1	Reboot	IN
2	IP Reset	IN
3	Synchronization input	IN
4	Synchronization output	OUT
5	Synchronization master output	OUT
6	NC	-
7	+COM	-
8	-COM	-

I/O2 : M12 12 core A-code socket (Female)

	10	2 3 4
1	_	
9	8	6
		12 ₇


PIN No	Function	I/O
1	Contamination output	OUT
2	NC	-
3	Malfunction output	OUT
4	Area output 1	OUT
5	Area output 2	OUT
6	Area output 3	OUT
7	Area input 1	IN
8	Area input 2	IN
9	Area input 3	IN
10	Area input 4	IN
11	+COM	-
12	-COM	-

Title

Drawing. No.

C-42-04425

6/14

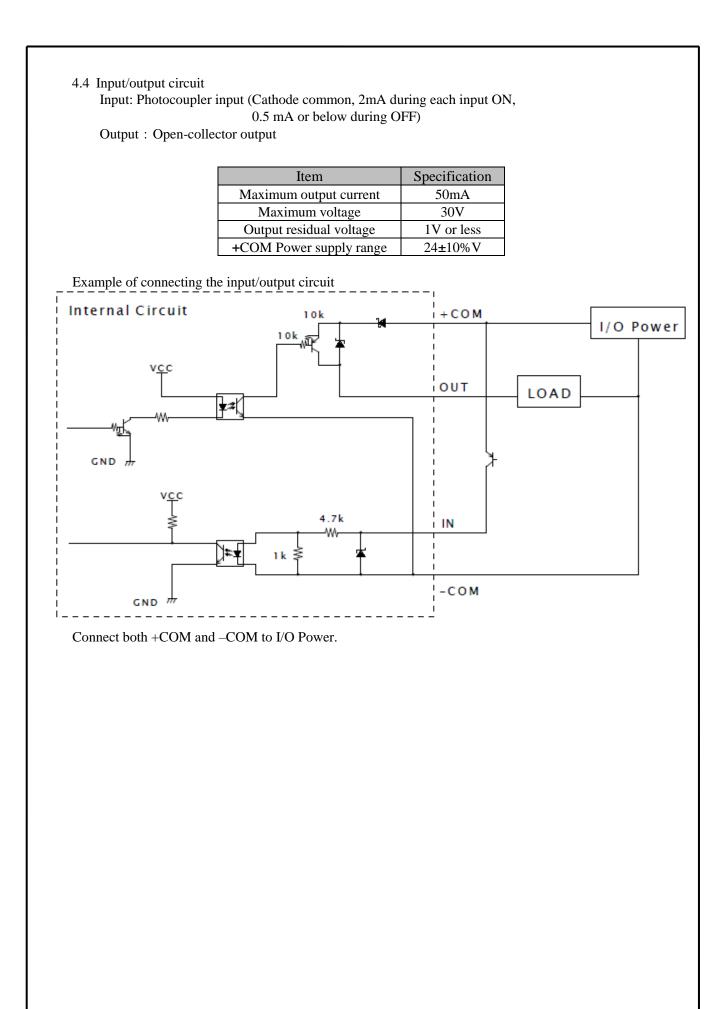

Title

- 5. Control signal
 - 5.1 Malfunction output
 - (1) Laser malfunction : When laser emission is not possible or laser power have exceeded the safety

class 1.

(2) Motor malfunction : When motor rotation inside the sensor is unstable.

When a malfunction occurs, the UGM-50LAP switches the malfunction output to ON (High level), and then stops laser emission and motor rotation.

You can check the error code using communication protocol SCIP. Refer to troubleshooting table in section 6 for error details.


5.2 Synchronization output

The UGM-50LAP outputs a pulse of 1ms every one scan for synchronized with the scanning.

The timing of the synchronization signal is shown in the figure below.

* Scan speed 20ms (In normal mode)

* Description based on scan speed 20ms

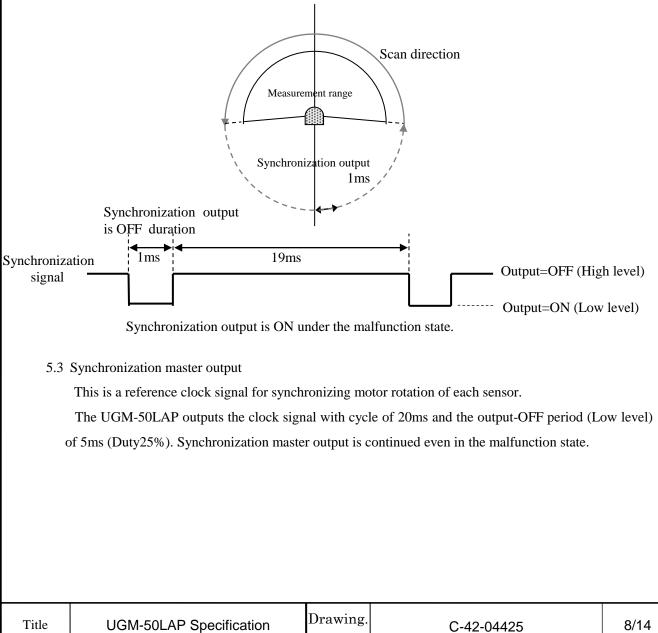

No.


🖽 Hokuyo Automatic Co.,LTD

5.4 Synchronization input

In a multiple connection of UGM-50LXP, you can synchronize with motor rotation inside each sensor.

By connecting the synchronization input terminal of the slave to both synchronization master output terminal and the synchronization input terminal of the master, you can synchronize the motor rotation of the slave with the motor rotation of the master. Synchronization is performed on the falling edge of the clock signal.

5.5 Example of connection between multiple sensors for synchronization of motor rotation

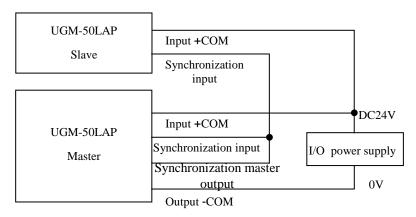


As shown in the figure above, it is possible to synchronize the motor rotation of the slave with the motor rotation of the master according with shifted the scanning time of each slave sensor by setting phases of each slave sensor.

You can confirm and configure phases using the application software.


5.6 Timing chart of synchronization input/output

• When the synchronization master output of the master is not connected to the synchronization input of the slave, the synchronization output terminals of both the master and the slave sensors continue to output pulse signals with cycle of 20ms and low of 1ms.

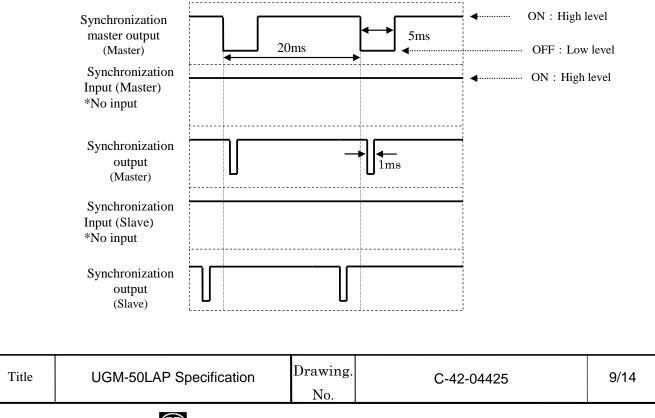

• When the synchronization master output of the master is connected to the synchronization input of the slave, the master sensor can synchronize falling edges of the synchronization master output signal with falling edges of the synchronization output signal.

When the phase value is set, the synchronization output with the phase shifted by the set value only. Error of phase setting should be within ± 1 ms.

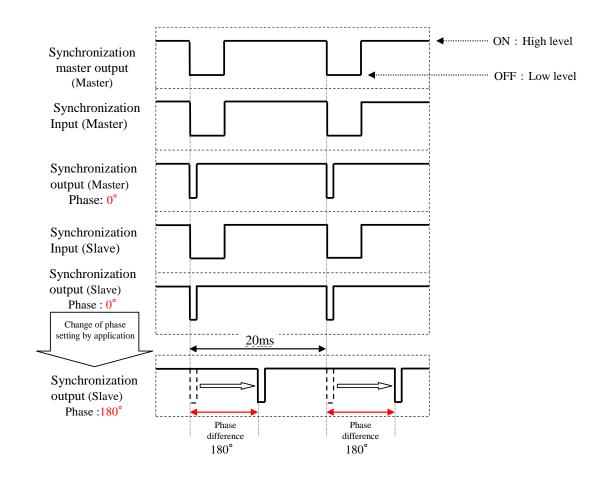

5.7 IP Reset input

Return the IP address to the initial value (192.168.0.10).

Switch to ON (High level) for 2 seconds or more, then switch to OFF (Low level) for IP address initialization.

<u>Notes</u>

Before you switch off the sensor power, you need to make sure that IP Reset input is in the Low level. If you switch off the sensor while IP Reset input is in High level, the sensor may not start normally after that.

5.8 Reboot input

When switching to ON (High level) for 2 seconds or more, you can restart the sensor operation.

5.9 Contamination output

When detecting dirt on the optical window (contamination detection)	: ON (High level)
When no detecting dirt on the optical window (No contamination detection)): OFF (Low level)

Title	UGM-50LAP Specification	Drawing.	C-42-04425	10/14
		No.		

5.10 Area input and selection area set

The setting of three regions are available for one area. The three regions correspond to the detection output 1, output 2, and output 3 respectively. You can select an area set number by switching the area input 1 to input 4. The setting of 15 patterns are available.

However, when all input 1 to input 4 are ON (High level), the sensor operates in the emission stop mode.

- * ON : High level, OFF : Low level
- * Input response time is up to 2 scans.
- * In the emission stop mode, detection outputs 1 to output 3 are switched to ON.


* If all area (inputs 1 to input 4) are open, area 15 is selected.


Area input 1	Area input 2	Area input 3	Area input 4	Area set
ON	ON	ON	ON	Stop emission
OFF	ON	ON	ON	Area 1
ON	OFF	ON	ON	Area 2
OFF	OFF	ON	ON	Area 3
ON	ON	OFF	ON	Area 4
OFF	ON	OFF	ON	Area 5
ON	OFF	OFF	ON	Area 6
OFF	OFF	OFF	ON	Area 7
ON	ON	ON	OFF	Area 8
OFF	ON	ON	OFF	Area 9
ON	OFF	ON	OFF	Area 10
OFF	OFF	ON	OFF	Area 11
ON	ON	OFF	OFF	Area 12
OFF	ON	OFF	OFF	Area 13
ON	OFF	OFF	OFF	Area 14
OFF	OFF	OFF	OFF	Area 15

5.11 Detection output

When detecting within configured area, output are switched to ON (High level). When no detecting within configured area, output are switched to OFF (Low level). In a malfunction state, each detection output are switched to ON state.

Desition of objects	Detection	Detection	Detection
Position of objects	Output 1	Output 2	Output 3
А	ON	ON	OFF
В	ON	OFF	OFF
С	OFF	OFF	OFF



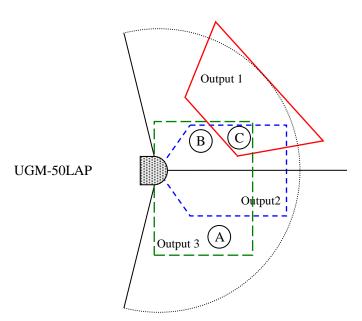

6. Troubleshooting

6.1 Error code table

You can obtain the causes of errors from STAT line of the "II" command response in the communication protocol SCIP. The error codes and solutions from the STAT line are as follows in table.

ID	Message	Meaning	solution	
000	no error.	Normal operation	No action is required.	
051	internal setup failed.	Sensor processing system error		
052	internal chip access failed.	Same as above	Sensor has failed and needs to be repaired.	
100	internal chip access falled.	Same as above		
200	encoder error.	Encoder error		
201	encoder enfor.	Elicodel elloi		
250	motor startup failed.	Motor error		
251	motor rotation error.	Unstable motor rotation	Reduce the vibration and noise to the sensor	
300	laser too high.	Laser error	Reduce the ambient	
301	laser too low.	Same as above		
302	laser no echo.	Same as above	light and noise to the sensor	

Title

Drawing. No.

6.2 Relation between product states and LED displays				
	LED			
Product states	Yellow green (Power)	Orange (Heater)	Blue (Detection)	Red (Malfunction)
During start up	ON	ON when heater is activated.	Blinks (2sec. intervals)	OFF
During operation	ON	ON when heater is activated.	ON when an object is detected.	OFF
During Malfunction	ON	OFF	OFF	OFF
During Motor stop (sleep)	ON	ON when heater is activated.	Blinks (4sec. intervals)	OFF
During contamination detection	Same as operation			
IP initialization	ON	ON when heater is activated.	Blinks (1sec. interval)	Blinks (1sec. interval)

6.2 Relation between product states and LED displays

6.3 Relation between product states and output signals

Product states	Synchronization master output	Synchronization output	Contamination detection	Malfunction output
During start up	Continuous output after power supply is ON.	Tr=ON(High)	Tr=ON(High)	Tr=ON(High)
During operation		1 ms per cycle Tr=OFF(Low)	Tr=OFF(Low)	Tr=OFF(Low)
During Malfunction		Tr=ON(High)	Tr=OFF(Low)	Tr=ON(High)
During Motor stop (sleep)		Tr=ON(High)	Tr=OFF(Low)	Tr=OFF(Low)
During contamination detection		Same as operation	Tr=ON(High)	Tr=OFF(Low)
IP initialization		Tr=ON(High)	Tr=OFF(Low)	Tr=OFF(Low)

* Output signals will be undefined immediately after power-ON. The undefined time depends on a motor speed(scan speed).

* From IP initialization completion to restart, output signals will be indefinite.

7. Heater function

The UGM-50LAP has a heater inside the product to prevent dew condensation on the optical window. You can select either "Active" or "Inactive" using the application software. The initial operation mode of the heater function is Inactive.

When the heater function is activated, the heater will operate if the temperature inside the product decreases below 0°C.

Title	UGM-50LAP Specification	Drawing.	C-42-04425	13/14
		No.		

When the temperature inside the product increases more than 10°C, the heater will stop its operation automatically.

8. Optical window contamination warning function

This function is enabled "Active" using the application software. When this function is enabled "Active", contamination output will switch to OFF (Low) if the optical window is contaminated above certain level. The UGM-50LAP will continue to operate and there will be no malfunction stop.

9. Ethernet setting

9.1 Default value

 IP default value
 :
 192.168.0.10

 Port number
 :
 10940

9.2 About changing IP address

You can change IP address using a dedicated application software.

9.3 IP address initialization

Switch IP reset input to ON (High) for 2 seconds or more, then switch to OFF (Low).

Title	UGM-50LAP Specification	Drawing. No	C-42